

Uniden® | A World Without Wires®

UNIDEN
SCANNER
ACCESSORIES



BC-RH96

OWNER'S MANUAL

Table of Contents

| | | | |
|---|-----------|--|-----------|
| Introduction | 3 | Setting Mobile Options | 19 |
| FCC Statement..... | 4 | Mobile Default Key Assignment..... | 19 |
| IC Statement..... | 5 | Setting Handy Options | 21 |
| Mounting the BC-RH96 | 7 | Default Handy Option Key Assignment..... | 21 |
| Using the Mounting Bracket..... | 7 | Setting the Function Mode | 22 |
| Using Hook and Loop Material..... | 9 | Setting Hold Timer..... | 22 |
| BC-RH96 Connections | 10 | Setting Auto Release..... | 23 |
| Connecting Cables | 11 | Miscellaneous | 23 |
| Remote Head and Scanner Power..... | 11 | Volume Settings - For Handy Scanner..... | 23 |
| Control Cable..... | 11 | Control Limitations..... | 24 |
| Data Port Cable — Firmware Updates..... | 12 | Serial Operation Precautions..... | 24 |
| Control Configuration Guides | 13 | Initialize Memory (Reset)..... | 25 |
| The BR330T Key Configuration..... | 14 | Using the Cable Clamp..... | 25 |
| The BCD396T Key Configuration..... | 14 | Specifications | 26 |
| The BCT15 Key Configuration..... | 15 | One Year Limited Warranty | 26 |
| The BCD996T Key Configuration..... | 15 | | |
| Operation | 16 | | |
| Setting the BC-RH96 Backlight..... | 17 | | |
| Configuration — Menu Mode..... | 18 | | |
| Setting the BC-RH96 LCD Contrast..... | 18 | | |

Introduction

Your Bearcat BC-RH96 Remote Head helps you get more out of your Uniden BCD396T, BR330T, BCT15, or BCD996T scanner.

The BC-RH96 provides the following features:

- It controls all the functions of your Uniden mobile or handy scanner (with the exception of the scanner's power control.)
- It gives you three shortcut keys that you can assign to your scanner's most often used operations.
- It serves as a large LCD with your handy scanner.

- It recognizes the scanner baud rate for reliable communications between units.
- Its Volume and Squelch controls emulate those on the scanner.
- It provides a large, easy to read LCD display with adjustable backlight and contrast levels.
- It emulates your mobile scanner's Close Call and Alert LED signals.

Please read the entire manual to familiarize yourself with installation and operation for maximum enjoyment.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

IC Statement

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Included with your BC-RH96

Your Bearcat Remote Head is supplied with essential components and accessories to get you operational.

Supplied are:

- The BC-RH96 Remote Head unit.
- A steel mounting bracket with attachment washers factory installed.
- Mounting hardware (screws and washers) to attach the bracket.
- Threaded knobs to allow mounting the Remote Head quickly to the bracket.

- Remote connection cable, 10 feet in length.
- A correctly polarized vehicle DC adapter to let you connect the Remote Head to a convenience outlet in your vehicle that provides 12-13.8 VDC.
- This Owner's Manual.
- A set of pocket-sized Quick Reference Configuration cards for convenient setup and usage.
- A Self Adhesive Cable Clamp

If any of the above items are missing or damaged, immediately contact your place of purchase or Uniden Customer Service at (800) 297-1023.

Mounting the BC-RH96

The following two mounting methods are suggestions used by most. Depending upon your individual situation, you may decide on a different approach.

Using the Mounting Bracket

For most vehicles, the supplied bracket will be the easiest method of mounting.


With the bracket removed from the Remote Head, use the holes in the bracket as a template to initially mark the location you plan to use in your vehicle. Be absolutely certain of what might be behind the mounting surface before making any holes, be it above, or below,

or in front of your dash, armrest console, or other location. If you drill carelessly, expensive damage can result. If in doubt, consult your vehicle dealer's service department or a qualified professional installer.

Important: AVOID AIRBAG DEPLOYMENT ZONES. Ignoring this installation concern may result in bodily harm and the inability of the airbag to perform properly.

Be sure to select a mounting location so that when you route power and remote cables they do not interfere with any existing cables or other controls.

Check local laws to determine if using a scanner is legal in your area.

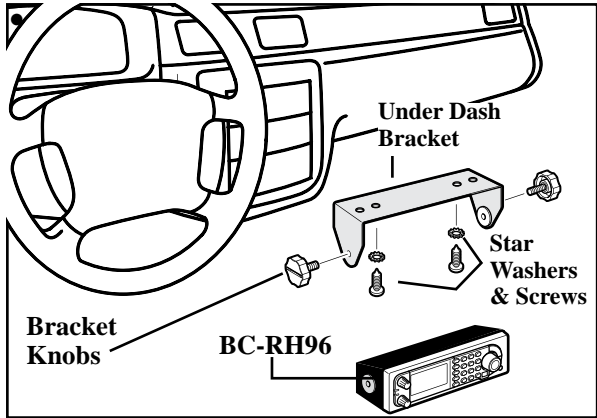

1. Using the supplied screws or other suitable hardware, secure the bracket.
2. Insert the BC-RH96 and insert the bracket knobs to lock the Remote Head in position.
3. Attach the provided Cigarette Lighter Power Cord to the rear power jack marked **DC IN 13.8V**. Then plug the adapter end into a dash mounted 12V DC socket.
4. Insert the 3-Conductor Mini-Plug of the supplied ten-foot cable in the **REMOTE** jack on the back of the scanner.

5. Route the Remote Cable through the Slotted Guide (3) so it lies flat. Route the Power Cord so it does not interfere with any other wires.

Using Hook and Loop Material

The rear of the unit, when all connectors and cables are properly routed, is flat. This permits using hook and loop material (not supplied) that has a heavy-duty peel and stick adhesive on one side. This material is generally available from electronic supply stores and hardware stores.

Do not apply the tape to the rear until all cables are installed and routed correctly.

Do not cover the slotted guide with the tape.


Follow the directions supplied with the hook and loop material. Locate a suitable spot on the dash, console, or other area. If you use the Remote Head in another place such as a radio room, using tape lets you quickly mount or remove the Head as desired.

Note: The two slots on the front of the Remote Head cannot be used for mounting. These slots are cosmetic features only.

BC-RH96 Connections

Note: Connect the Remote Cable and route it through the cable channel as shown. Then connect the DC Power Cable and route it through the channel.

Always route both cables through the channel.

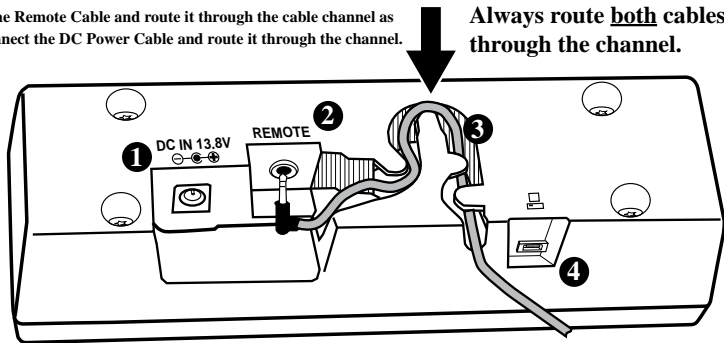

- 1 DC Power Input Jack
- 2 To Remote Cable Mini-Plug
- 3 Cable Routing Guides
- 4 Data Port (for firmware updates)

Connecting Cables

There are three cables that you can connect to the BC-RH96.

- The DC power cable
- The Remote Control cable
- The Data Port cable (not supplied with BC-RH96)

Remote Head and Scanner Power

To provide power to the Remote Head, insert the barrel of the cigarette lighter adapter into the jack in the back of the unit marked **DC IN 13.8V**. Insert the other end in a convenient socket on the dash of your vehicle.

To connect a power lead permanently, obtain a barrel connector 5.5 mm diameter, with a center pin 2 mm

diameter and wire it with the center positive using at least 18 gauge wire to an extra fuse block terminal of your vehicle.

The Remote Head cannot turn power to the scanner off or on. Therefore, consider connecting the power lead of the scanner to a terminal on your vehicle that is turned off when you turn off the ignition key.

Control Cable

The ten-foot supplied Control Cable has a stereo mini-plug on one end and a scanner serial connector on the other. Insert the mini-plug into the **REMOTE** jack on the rear of the Remote Head. Route the cable through

the guides to keep the cable correctly positioned. Then, route the remainder of the cable toward the location of your target scanner. When doing so, be sure to avoid sharp metal edges of your vehicle's body, or other possible hazards. Be sure the cable does not interfere with controls, operation of the vehicle, or passenger safety. Insert the cable's special connector in the front port of the BCT15/BCD996T mobile scanner, or the side port of the BR330T/BCD396T handy scanner.

Data Port Cable — Firmware Updates

The Remote Head has a data port (see *BC-RH96 Connections*) so you can update the firmware using the data transfer cable provided with your scanner. Con-

nect the data transfer cable to this port on the bottom of the Remote Head. Connect the other end to the DB9 serial port on your PC. This is the only purpose of this connection.

Important:

For best operation, be sure your scanner always has the latest firmware. Visit www.uniden.com to verify that your scanner has the most up-to-date firmware.

Control Configuration Guides


The BC-RH96 lets you remotely operate the following scanners:

- BCT15 Mobile Scanner
- BCD996T Mobile Scanner
- BR330T Handy Scanner
- BCD396T Handy Scanner


Even though the scanners have different controls and functions, when you connect the BC-RH96 to the scanner, the Remote Head automatically changes the functionality of its controls to match the operation of the target scanner.

Important: If you have more than one scanner, be sure to turn off power to the BC-RH96 before switching target scanners.


To assist you to better understand each of these changes, a set of pocket-sized Quick Reference Cards are provided. The diagrams on the next pages replicate the card diagrams.

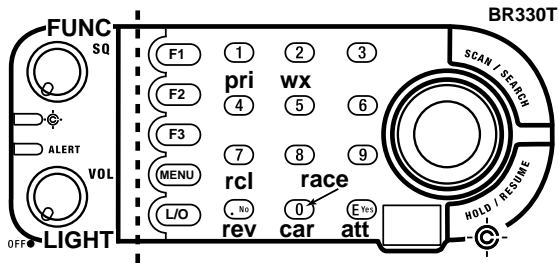

The BR330T Key Configuration

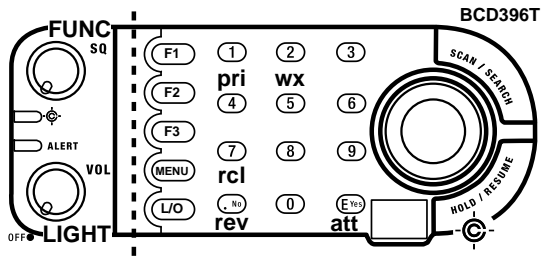


The BCD396T Key Configuration

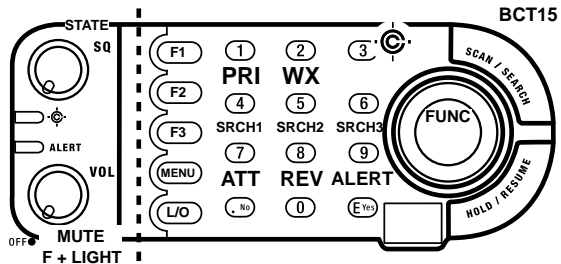

F1=_____ F2=_____ F3=_____

The BCT15 Key Configuration

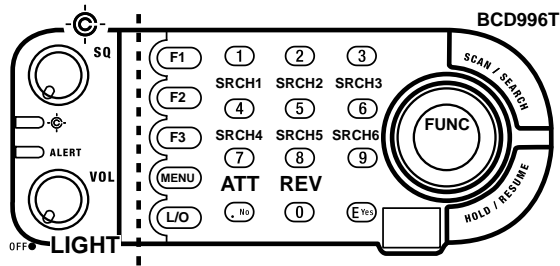

F1=_____ F2=_____ F3=_____

The BCD996T Key Configuration

Operation

Apply power to your target scanner and set its Baud Rate to the highest setting. Make sure that the Remote Control cable is properly connected, and rotate the **VOL** control clockwise past **OFF** until it clicks.

The LCD displays the following screens (your version number may be different than the screen shown here):


```
BC-RH96  
  
Press MENU Key  
for Config.
```

```
Uniden Bearcat  
BC-RH96  
  
Version 1.00.00
```

If you have not connected a target scanner, you see the screen below. If the BC-RH96 remains on while you turn on the scanner, this display is automatically replaced with the scanner's initial display.

```
BC-RH96  
  
Scanner  
Unconnected
```

When you turn the Remote Head off, you see the screen to the right which reminds you that power is still applied to the target scanner.

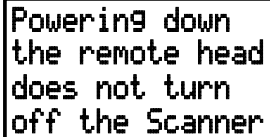

Powering down
the remote head
does not turn
off the Scanner

Setting the BC-RH96 Backlight

To adjust the backlight brightness level on the Remote Head, repeatedly press the **VOL** control. The display cycles through available backlight brightness levels, including off. Stop when you reach the desired level.

Brightness Auto-Adjust (mobile scanners only)


When you connect a mobile scanner, the Remote Head automatically adjusts its backlight brightness level to match the brightness level of the target mobile scanner. If you change the brightness level on either the Remote Head or the target scanner, the level changes on both devices at the same time. (This function is not available on Handy Scanners.)

Note: If the Remote Head is connected to a BCT-15 scanner, press F + VOL control to change the backlight brightness level.

Configuration — Menu Mode

Once you have the units on, press [MENU] to enter the Configuration Settings Options. You can skip the opening screens by holding [MENU] while turning on power. You see the Remote Head Menu screen.

- To select an item on the screen, rotate the **FUNC** knob to scroll to the item.
- To make a choice, press [E/Yes] or the **rotary FUNC** knob.
- To step back to a previous menu, press [MENU].

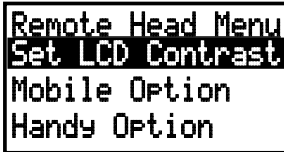

- To exit from the Menu Mode, press [SCAN], [HOLD], or [L/O].
- To re-enter the Menu Mode, turn the Remote head off then on while holding in [MENU].

Setting the BC-RH96 LCD Contrast

1. Rotate the rotary control to **Set LCD Contrast** then press the knob or [E/Yes].
2. Rotate the knob from **Contrast 1** through **Contrast 15**. The LCD contrast changes with each level. The default is level 8.
3. When you reach the desired level, press the knob or [E/Yes] again to make your selection.

Setting Mobile Options

1. Scroll to highlight **Mobile Option**, then press the rotary knob.
2. The screen shows **Set Key Assign**. Press the rotary knob again.
3. Scroll to the desired key (**F1 Key**, **F2 Key**, or **F3 Key**) and press the rotary knob to select it.
4. For each F Key, you can select a function from the **Select Action** menu screen.

| |
|--------------------|
| Select Action |
| Default Key |
| F+Menu Key |
| F+L/O Key |

The Default selection associates the F Keys on the Remote Head exactly the same as the corresponding F Key on the target mobile scanner.

Mobile Default Key Assignment

| Key | ORIGINAL Key Operation | |
|------|------------------------|-----------|
| | BCD996T | BCT15 |
| [F1] | [PRI] | [POL/DOT] |
| [F2] | [WX] | [HP/BT] |
| [F3] | [GPS] | [GPS] |

The Default Option table only applies to the BCT15 and BCD996T. The following list applies to all four scanners (mobile and handy type) for F1, F2, or F3.

| F1, F2, F3 Key | Function |
|-----------------------|---------------------------|
| F+Menu Key | [FUNC]+[MENU] |
| F+L/O Key | [FUNC]+[L/O] |
| Scan Key | [Scan] |
| Hold Key | [Hold] |
| Service Menu | Service Search Range Menu |
| WX Scan Menu | WX Operation Menu |
| Goto Custom | Custom Search Mode |
| Goto CC Only | Close Call Only Mode |
| Goto Tone-Out | Tone Out Standby Mode |

| | |
|------------------------|------------------------------|
| CC Band Menu | Close Call Band Setting Menu |
| Settings Menu | Settings Menu |
| Brdcst Scrn Menu | Broadcast Screen Band Menu |
| Search L/O Menu | Review L/O List |

Details about each of the operations of the F keys listed above can be found in the respective Owner's Manual for the mobile or handy scanners.

Setting Handy Options

1. Scroll to highlight **Handy Option**, then press the rotary knob.
2. The screen shows **Set Key Assign**. Press the rotary knob again.
3. Scroll to the desired key (**F1 Key**, **F2 Key**, or **F3 Key**) and press the rotary knob to select it.
4. For each F Key, select a function from the Select Action menu screen.

The Default selection associates the F Keys on the Remote Head exactly the same as the corresponding F Key on a Mobile scanner or a function on a Handy scanner.

Default Handy Option Key Assignment

| Key | ORIGINAL Key Operation | |
|------|------------------------|---------|
| | BR330T | BCD396T |
| [F1] | Custom Search | |
| [F2] | CC Only | |
| [F3] | Tone-Out | |

F Key column applies to the BC-RH96 F keys.

Setting the Function Mode

If you scroll to the Handy Option menu, you can highlight **Set Func Mode**.

Select this to choose between **Set Hold Timer** and **Set Auto Release**.

Setting Hold Timer

When you select this option, you can scroll through and select from five settings. The setting determines how long the knob acting as the **FUNC** control is enabled each time you press it if you do nothing else.

The five settings are:

- Off:** Function mode is continuously enabled only while pressing the Control or SQ knob.
- 3 sec:** Function mode is enabled for 3 seconds after releasing the Control or SQ knob.
- 5 sec:** Function mode is enabled for 5 seconds after releasing the Control or SQ knob.
- 10 sec:** Function mode is enabled for 10 seconds after releasing the Control or SQ knob.
- Infinite:** Function mode is enabled until the Control or SQ knob is pressed again (default).

Setting Auto Release

Choose this option to set the Function Auto Release to **On** or **Off**.

Turning the Auto-Release on lets you press any key to exit the Function mode.

Turning the Auto-Release off (the default setting) means you can only press the Function key to exit Function mode. No other key has any effect.

Miscellaneous

Volume Settings - For Handy Scanner

While it is possible to configure the BC-RH96 rotary **FUNC** control as your **VOL** control, we suggest not doing so. The **VOL** control still functions as a volume control. If the **FUNC** control is configured as volume, it is possible to have a situation that a very slight movement of the **VOL** control results in a sudden and loud increase in your audio. It is best to configure the **VOL** control as volume in all cases.

Control Limitations

There are some operations that cannot be performed using the BC-RH96.

| Operation | Scanner Type |
|---------------------------|---------------------|
| Power control | All |
| Wired and On-Air Clone | All |
| Upside Down Display | Mobile |
| Backlight Scanner Control | Handy |
| Key Lock Operation | Handy |
| No Close Call & Alert LED | Handy |

Serial Operation Precautions

The BCT15 and the BCD996T have a 9-pin serial connection in the back designed for use with serial operations in addition to the special serial jack on the front.

Other than connecting a GPS, the front and the back cannot be used or connected at the same time when the BC-RH96 is in use.


For example, if you connect a 9-pin serial cable to your PC to use the UASD programming software, disconnect the BC-RH96 front cable first.

Initialize Memory (Reset)

To reset the BC-RH96 to factory default settings, follow the sequence below. Note that once done, there is no undo and all programmed keys are reset.

With the unit off, press and hold the following keys and turn on power at the same time: [2], [9] and [HOLD]. You see the reset screen below.

If you turn off power during reset, the process starts again when you next turn on the unit.




All Memory Clear
Please Wait

Using the Cable Clamp

A self-adhesive clamp/guide is provided to assist you to safely route the Remote Cable to your target scanner. Clean the planned location, peel the base covering, and firmly press it on the scanner.

Then route the Remote Cable through the guide. This helps assure that the remote Cable will not come out of the special connector on either a Mobile or Handy scanner.

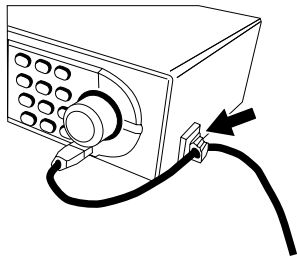

Specifications

| | |
|---------------------------|---|
| Size (inches) | 7.2 W x 1.9 D x 2.2 H (without knobs) |
| Weight (Remote Head only) | 0.7 pounds |
| Input Voltage | 13.8 Vdc (11.0 - 16.6 Vdc) |
| Current Drain (nominal) | In standby: 2 mA In use: 106 mA (backlight high) |
| Operating Temperature | -20° to +60° C (-4° to +140° F) |

One Year Limited Warranty

Important: Evidence of original purchase is required for warranty service. WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden") ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with

equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit. **THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER**

OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America and Canada.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

Uniden America Service
4700 Amon Carter Blvd.
Fort Worth, TX 76155

Uniden[®] | A World Without Wires[®]

Visit www.uniden.com
to register your product.

© 2007 Uniden America Corporation, Fort Worth, Texas. Contains additional foreign articles. Printed in China.

UZZ01705ZZ(0)